


Instruction **Supplement**

Series B9

Electronic Metering Pump

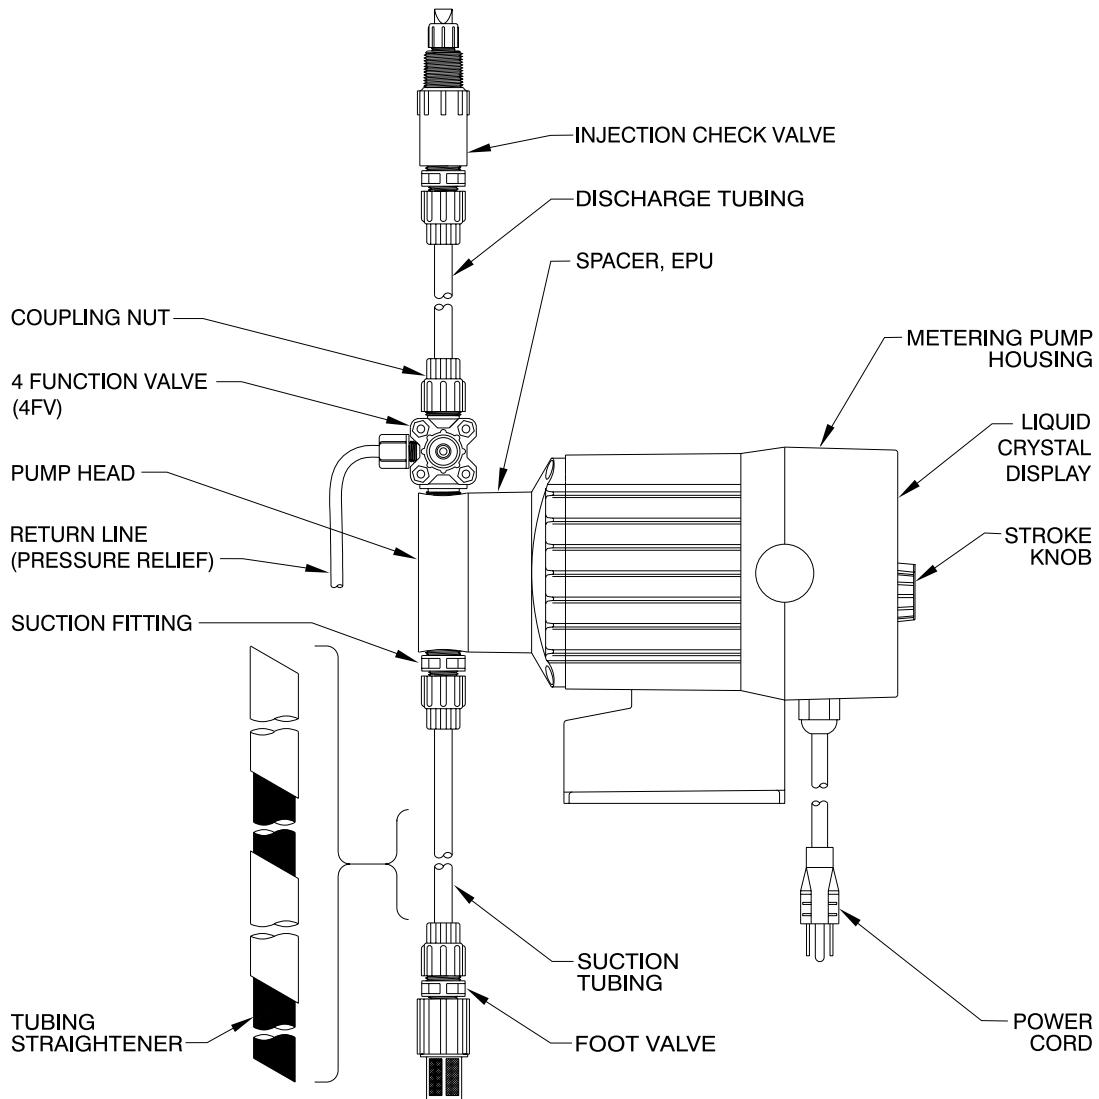

Metering Pump Component Diagram




8 Post Office Square
Acton, MA 01720 USA
TEL: (978) 263-9800
FAX: (978) 264-9172
<http://www.lmipumps.com>



Replaces same of Rev. B 11/97
1794.C 2/98

Series B9 Drive Assembly Exploded View Diagram

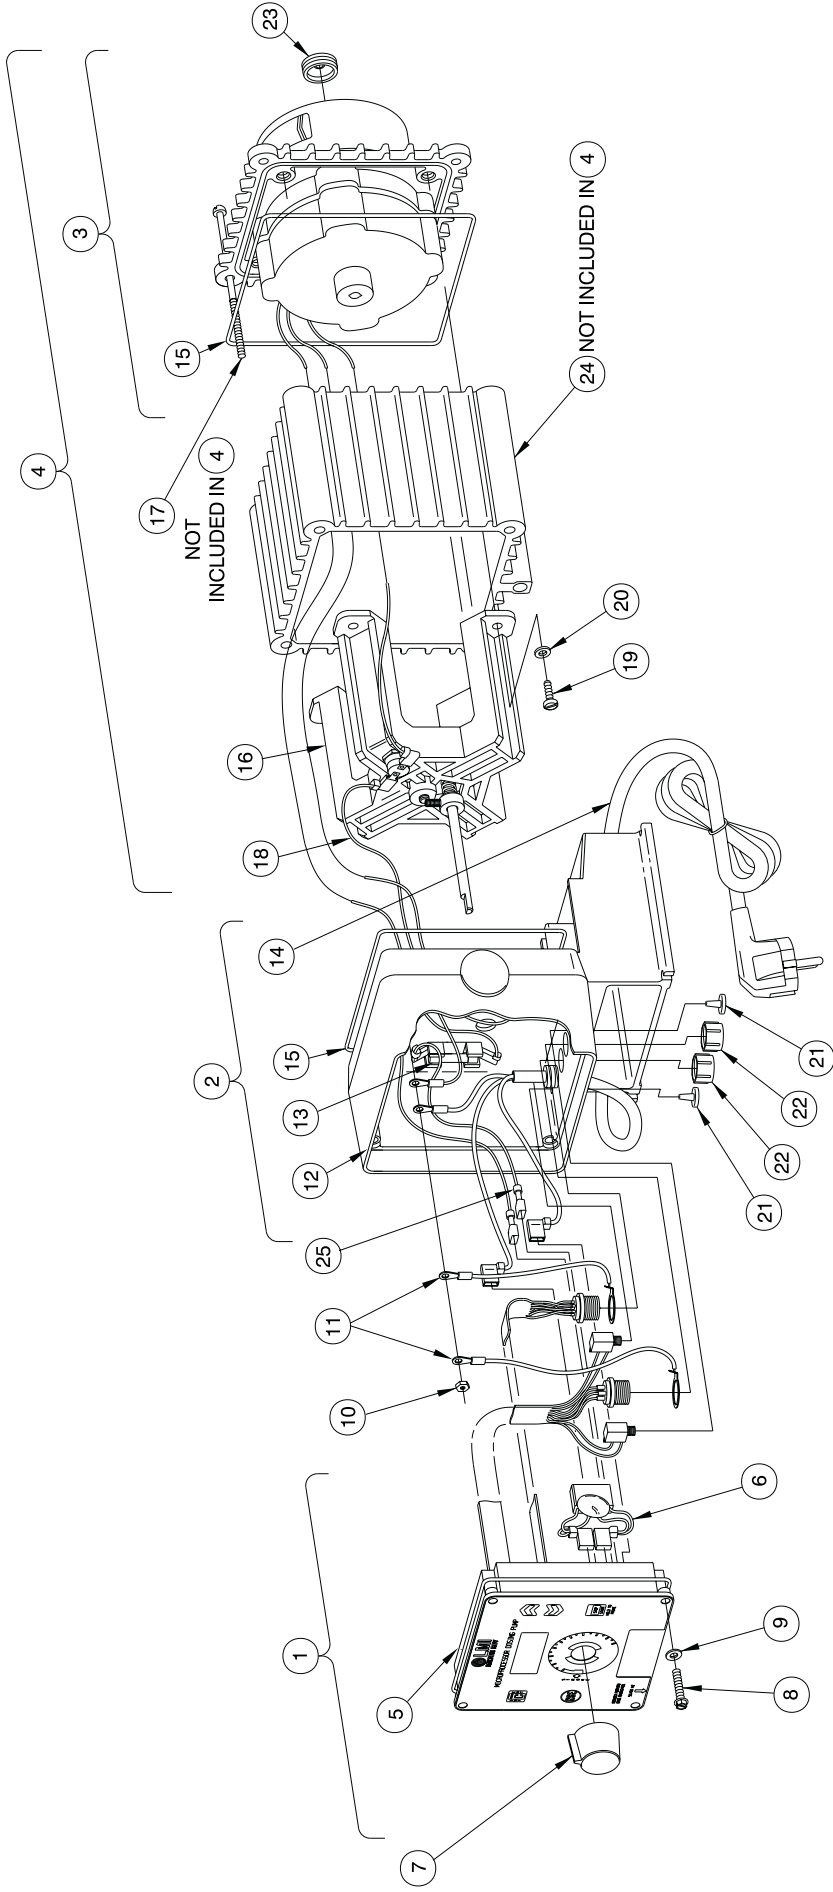


Series B9 Drive Assembly Parts List

KEY NO	MODEL SERIES	PART NO.	DESCRIPTION	QTY.
1	B911	35901CE	Control Panel Assembly, 120V	1
	B921, B931, B941	35895CE	Control Panel Assembly, 120V	1
	B912, B913, B915, B916, B917	35954CE	Control Panel Assembly, 230V	1
	B922, B923, B925, B926, B927	35953CE	Control Panel Assembly, 230V	1
	B932, B933, B935, B936, B937			
	B942, B943, B945, B946, B947			
2	B911, B921, B931, B941	35949CE	Housing Assembly, 120V	1
	B912, B922, B932, B942	35955CE	Housing Assembly, 230V	1
	B913, B923, B933, B943	35950CE	Housing Assembly, 220-240V/DIN	1
	B915, B925, B935, B945	35951CE	Housing Assembly, 220-240V/UK	1
	B916, B926, B936, B946	35956CE	Housing Assembly, 220-240V/AUST	1
	B917, B927, B937, B947	35952CE	Housing Assembly, 220-240C SWISS	1
	B911, B921	26893CE	EPU and Spacer Assembly	1
	B912, B913, B915, B916, B917	26894CE		
	B922, B923, B925, B926, B927			
	B932, B933, B935, B936, B937			
B942, B943, B945, B946, B947				
3	B911, B921	31927CE	EPU & Spacer Assembly w/Stroke Adj.	1
	B912, B913, B915, B916, B917	31928CE		
	B922, B923, B925, B926, B927			
	B731	31929CE		
	B932, B933, B935, B936, B937	31930CE		
	B941	31931CE		
	B942, B943, B945, B946, B947	31932CE		
	B9	10166	O-Ring	1
	B911, B921, B931, B941	35254	Varistor Assembly, 120V	1
	B912, B913, B915, B916, B917	35255	Varistor Assembly, 230V	1
B922, B923, B925, B926, B927				
B932, B933, B935, B936, B937				
B942, B943, B945, B946, B947				
7	B9	31891	Stroke Knob	1
8	B9	30306	Screw, Self Tapping	4
9	B9	33889	Washer	4

KEY NO.	MODEL SERIES	PART NO.	DESCRIPTION	QTY.
10	B9	10191	Nut, 6-32	2
11	B9	35266	Wire Assembly	2
12	B9	35890	Housing	1
13	B911, B921, B931, B941	25825	Fuse, 4A Rectifier	2
	B912, B913, B915, B916, B917	25824	Fuse, 2A Rectifier	2
	B922, B923, B925, B926, B927			
	B932, B933, B935, B936, B937			
B942, B943, B945, B946, B947				
14	B911, B921, B931, B941	29033CE	Power Cord, 120V	1
	B912, B922, B932, B942	29039CE	Power Cord, 230V	1
	B913, B923, B933, B943	29042CE	Power Cord, 220-240V/DIN	1
	B915, B925, B935, B945	29044CE	Power Cord, 220-240V/UK	1
	B916, B926, B936, B946	29046CE	Power Cord, 220-240V/AUST	1
	B917, B927, B937, B947	29048CE	Power Cord, 220-240V SWISS	1
	B9	35269	O-Ring	2
	B9	31898	Stroke Adjustment Assembly	1
17	B9	25127	Screw 10-24 x 4.56	4
	B9	29410CE	Wire Assembly	1
19	B9	10590	Screw	4
20	B9	10415	Washer	4
21	B9	30307	Plug	2
22	B9	25930	Cap Cover	2
23	B9	10973	Seal	1
24	B9	25068	Sleeve	1
25	B9	26344CE	Wire Assembly	2

Series B9 Control Panel Detail

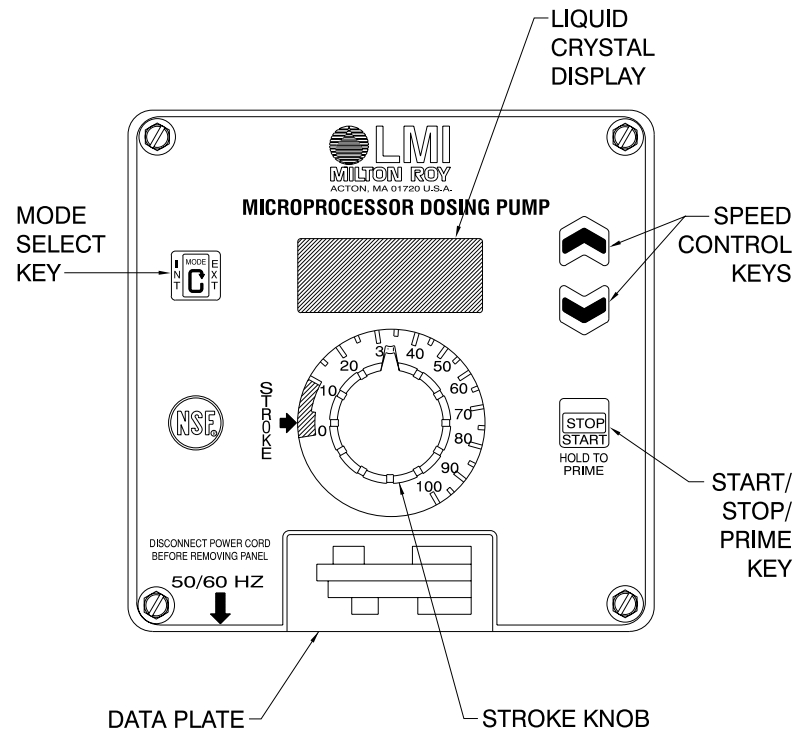

Series B9 Wiring Diagram

